


WARNING

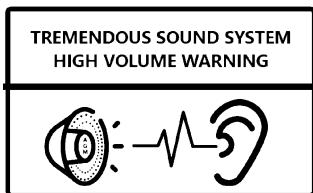

This device is equipped with a tremendous sound system to provide you fantastic listening pleasures. Due to the intensity of high dB levels, hearing protection is advised.

The speaker at high volume may damage your hearing, vibrate your chest and cause your heart to skip a beat. Tune the volume up gradually, and enjoy the music! (In Home menu, press NAVI-up or NAVI-down key to adjust the volume to comfortable level)



Built to Endure

NOTICE

Features of the product and its accessories described herein rely on the software, phone internal memory and local networks, and may not be activated or may be limited by local network operators or service providers. Therefore, the descriptions herein may not exactly match the purchased product or its accessories. The manufacturer reserves the rights to change or modify any information or specifications contained in this manual without prior notice or obligation. The manufacturer is not responsible for the legitimacy or quality of any products that you may upload or download through this device including but not limited to text, images, music, movies, and non-integral software. Any consequences arising from the usage of the preceding products on this device is the responsibility of the user.



*Device photos may differ in colors or models on M7/M7 SE/M7 PRO

WHAT'S IN THE BOX

- Device
 - Battery
 - USB cable
 - Quick start guide
- * Contents may vary for different versions or areas.

FUNCTIONS DESCRIPTION

1, RECEIVER

Waterproof receiver for receiving calls. Do not touch with hard materials.

2, DISPLAY SCREEN*

*Variant dependent. Some devices may not have the touch screen. Front camera is on the top right.

3, PTT KEY/USER DEFINED KEY

Push to talk key. User can also define it as Audio Play, Camera or LED Torch. Press and hold to activate the defined functions when screen is unlocked.



1

2

3

4

5

6



24, Micro SD CARD TRAY

Open the micro SD card tray and install SD card (contacts face down). Please note that micro SD cards are not supplied with the device.

25, SIM TRAY 1

Align Nano SIM according to the note on metal (contacts face down). Only one SIM will deliver 4G service when two SIMs are inserted.

26, BATTERY CONNECTOR PINS

Align battery contacts with the battery connector pins to insert the battery.

GETTING STARTED

WATERPROOF WARNING:

AGM M7 is IP68 certified. Battery doors and USB port cover must be completely closed to prevent water damage

INSTALLING A NANO SIM CARD OR MICRO SD CARD

1. Place your device on a flat, clean surface with the display facing downwards.
2. Press and pull down to open the outer battery door
3. Open the inner battery door from right bottom corner
4. Take out the battery from top and remove the insulation tape (if have) from the battery contacts
5. Align Nano SIM according to the graphic note and use your fingertip to place the Nano SIM card in the SIM 1/ SIM 2 tray with gold pins facing downwards.
6. In case A MEMORY CARD need to install, please Open the micro SD card tray by slide the metal cover in the direction of the 'Open' arrow (which you'll find stamped on the metal tray) and lift the unhinged edge to open. Install the microSD card (contacts face down), finally close the metal cover and slide in the direction of the 'Lock' arrow, to secure in the closed position.
7. Reinsert the battery, inner battery door and outer battery door.

15, POWER/BACK/ HANGUP KEY

Press and hold to turn on the device. Press and hold to open the Power off options (Power off / Restart) when the device is on.

16, RING/MUTE/VIBRATE MODE/#

Press and hold # key to change modes of RING, MUTE and VIBRATE

17, Torch Key/O

In home menu, press and hold to turn on/off the LED torch

18, LOUDSPEAKER

Waterproof speaker. May be adjusted to a comfortable volume. The speaker volume may become lower after immersion in water but will recover once dry.

19, CAMERA

Camera does not support a flash light.

20, OUTER BATTERY DOOR

Outer battery door does not prevent water ingress. Press and pull down to open the outer battery door. Press and push up to close the outer battery door.

21, INNER BATTERY DOOR

Inner battery door is designed to prevent water ingress. Install and open according to graphic notes. Open the inner battery door from right bottom corner. Align the six ridges with the slot and close the inner battery door tightly.

22, BATTERY

The battery is removable.

23, SIM TRAY 2

Align Nano SIM according to the note on metal (contacts face down). Only one SIM will deliver 4G service when two SIMs are inserted

4, LEFT SOFT KEY

This button corresponds to options shown at the bottom of the screen left. The function of the button will change depending on the menu.

5, OK KEY

Press once to make a selection.

6, CALL/ANSWER KEY

Press to make a call or answer a call.

7, KEYPAD

Use to input numbers and letters.

8, KEYBOARD UNLOCK*/CLEAR CACHE

When the screen is woken up, press LEFT SOFT KEY and KEYBOARD UNLOCK to unlock the phone. In home menu, press and hold to Clear the Cache of the phone should it begin to run slowly.

9, MIC

Waterproof microphone for making calls and voice recording. Do not touch with hard materials.

10, LED TORCH

High brightness top LED torch.

11, USB PORT

USB Type-C I/O port. Close the rubber cover before touching water.

12, CHARGING SPOTS

Desk top charger contact spots.

13, RIGHT SOFT KEY

This button corresponds to options shown at the bottom of the screen right. The function of the button will change depending on the menu.

14, NAVI-KEYS

In the home page, press NAVI-up/down keys to adjust the volume.

In the home page, press NAVI-left key to enter Recent Used Applications Page or press NAVI-right key to enter Pull-down Menu. In the menu page, press to move directions.

REMARK

In some versions of this device, users can install third party application via downloaded .APK file. The installed applications need fit for small screen operation and shall not be more than 2. Third party application compatibility is not guaranteed by AGM.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Outer FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies: <ANSIC95.1> (1992) / <NCRP Report 86> (1986) / <ICNIRP> (1999)

These standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95. 1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:
Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

RF Exposure Information:
This product is compliance to FCC RF Exposure requirements and refers to FCC website <https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> search for FCC ID: 2AL95-M7 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back/front of the phone kept 0.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.5cm must be maintained between the user's body and the back/front of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 0.5cm separation distance between the user's body and the back/front of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided. For more information about RF exposure, please visit the FCC website at www.fcc.gov

Enabling Data and Hotspot

Select and enable cellular data from the Pull-down menu or from the Settings menu. When cellular data connection is on, enable Hotspot from the Pull-down menu or from the Settings menu.

Adding a Language:

Select the Settings icon to enter Settings menu. Select System and choose Languages & input Select + to Add a language. Press and Hold the language you have chosen and move to top. Select the three dots at top right of the screen to remove a language.

Taking a Photo:

Select Camera icon to activate camera menu. Press OK key or touch the shot icon to take a photo. Touch the bottom-left view icon to check photo or video history.

Using FM Radio

Plug earphone as FM antenna. Select FM Radio icon to enter FM radio menu.

Volte call*

Volte calling is supported in some areas and only with some SIM cards. The signal bar place will show "4G" or "HD" or "VoLTE" during calling if Volte is working.

More Settings

Select Settings icon to enter setting menu. Select and modify items such as Wallpaper, Brightness, Volume, Ringtones, Bluetooth, and Time or to reset the phone back to factory default.

CACHE CLEAR

In home menu, press and hold "" key to Clear the Cache of the phone should it begin to run slowly

TORCH SWITCH

In home menu, long press the "0" key to turn on/off the torch (Or can enter the pull down menu and turn on/off the torch by click the torch icon)

Lock/Unlock the screen

Press once the POWER key in HOME screen page. The phone screen will be locked when the phone is not in use. Press POWER key once to wake the screen when the device is idle. When the screen is woken up, press LEFT SOFT KEY and KEYBOARD UNLOCK (*KEY) to unlock the phone.

Making a call

Unlock the phone and press digit number to make a call. Select and enter Contacts menu and choose a person to make a call.

Sending an SMS/MMS*

Select and enter Messaging menu to write SMS or MMS. MMS is dependent on the APN settings and it may not work with some SIM cards. The M7 does not support automatic settings updates sent by your network provider.

WIFI Connection:

Select and enter WIFI setting from the Pull-down menu or from the Settings menu. Select the WIFI spot and enter password to connect.

COMMON FUNCTIONS

POWERING YOUR DEVICE ON/OFF

POWER ON
Press and hold POWER key. The default language is English, please go to Settings if need change a language.
POWER OFF
Press and hold POWER key. Select Power off

HOME AND MENU SCREEN PAGE

The Home menu screen is the starting point for accessing your device's features. From here you can access the Menu screen by pressing OK key.

VOLUME TUNING

In home menu, press NAVI-up/down to enter Sound menu and adjust the volume

INPUT LETTERS DIGITS AND CHARACTERS

When inputting words by the keypad, press # to change between Alphabet and Numerical Digit. When inputting words by the keypad, press # first to select Alphabet input, and then press 1 to select Symbol input. When inputting words by the keypad, press # first to select Alphabet input, and then press * to change between capital letter and lowercase. This device supports keypad input for the following languages, English, Français, Deutsch, Italiano, Español, Português, Nederlands, Dansk, Svenska, Suomi, Русский.

CHARGING THE BATTERY

Before using your device for the first time you will need to charge the battery.

1. Remove the insulation tape (if have) from the battery contacts.
2. Connect the USB power cable to the charging power adapter. AGM M7 is an Eco-friendly mobile device, which does not come along with a power adapter in the box in editions of some areas. AGM M7 supports CE/CB/FCC/CCC/EAC or equivalent certified chargers. The recommended charger output is 5V/1A or 5V/2A. Uncertified equipment may cause damage to the device or cause batteries to explode.
3. Open the USB Type-C port cover and connect the USB power cable to the port. Be careful not to use excessive force when plugging the cable. Any damage caused by attempting to insert the connector incorrectly is not covered by the warranty.
4. Plug the charger into an AC mains socket.
5. When charging is complete, remove the cable from the device, then unplug the power adapter from the mains socket. Close the USB port cover on the device.
6. AGM M7 supports cradle charger, which need purchase the charger separately.

INFORMATION CONCERNING CE SAR CERTIFICATION (SPECIFIC ABSORPTION RATE)

The SAR limit of Europe is 2.0 W/kg . The device has been tested against this SAR limit . The highest SAR value reported under this standard during product certification for use in the ear is 0.795 W/kg and when properly worn on the body is 1.536 W/kg . This device was tested for typical body-worn operations with the back of the handset kept 5 mm from the body . The device complies with RF Specifications when the device is used at 5 mm from your body . The use of belt clips , holsters and similar accessories should not contain metallic components in their assembly . The use of accessories that do not fulfill these requirements may not comply with RF exposure requirements , and should be avoided .

Basic information of manufacturer

Company: SHENZHEN AIJIEMO SCIENCE AND TECHNOLOGY CO.,LTD

Copyright © AGM Group Limited 2021. All rights reserved.

THIS DOCUMENT IS FOR INFORMATION PURPOSES ONLY, AND DOES NOT CONSTITUTE ANY KIND OF WARRANTY.

WARNING

At full volume, extended use of the mobile audio player may damage the user's hearing.

DISPOSAL AND RECYCLING INFORMATION

This symbol on the device (and any included batteries) indicates that they should not be disposed of as normal household garbage. Do not dispose of the device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of their life.